

Model	Part NO	Part Code	Description
LM-390A	1	AA05102	TAP TIGHT (P)M3X8
LM-390A	2	AA05553	SCREW 2X4 CF
LM-390A	3	AA05564	SCREW 2.6X5 CF
LM-390A	4	AA21102	PAN-HEAD SCREW 3X4
LM-390A	5	AA21131	PAN-HEAD SCREW 3X16
LM-390A	6	AA21144	PAN HEAD SCREW 3X12
LM-390A	7	AA21150	PAN-HEAD SCREW 2X4
LM-390A	8	AA21151	SCREW 3 X 5
LM-390A	9	AA21304	PAN-HEAD SCREW 3X6
LM-390A	10	AA21567	SCREW 3X6 FT CF
LM-390A	11	AA21572	SCREW 2.6X4
LM-390A	12	AA22101	PLUS SCREW 3X10
LM-390A	13	AA25117	BIND SCREW 3 X 8
LM-390A	14	AA31601	SCREW 2X6
LM-390A	15	EE31101	PLATE WASHER 1-3
LM-390A	16	EE31118	PLATE WASHER
LM-390A	17	EE33105	WASHER4(0.5T)
LM-390A	18	EE39722	WASHER 5.1X9X0.5
LM-390A	19	EE80108	CORRUGATED WASHER 5
LM-390A	20	ER13866	CAP USB
LM-390A	21	YY00006	BAND SG-100
LM-390A	22	JJ10109	E-RING 2
LM-390A	23	JJ10509	E-RING 4CF
LM-390A	24	JJ10514	E-RING 3 CF
LM-390A	25	KK13319	TENSION SPRING 3319
LM-390A	26	KK13344	SPRING 3344
LM-390A	27	KK13345	TENSION PRIGN 3345
LM-390A	28	KK13346	SPRING 3346
LM-390A	29	KK13347	SPRING 3347
LM-390A	30	KK23833	COPM. SPRING 3833
LM-390A	31	KK23836	COMP. SPRING 3322
LM-390A	32	KK23837	COMP. SPRING 3837
LM-390A	33	KK23838	COMP. SPRING 3838
LM-390A	34	KK29052	COMP. SPRING 9052
LM-390A	35	KK29053	COMP. SPRING 9053
LM-390A	36	KK33382	TORSION SPRING 3382
LM-390A	37	KK34071	TORSION SPRING 4071
LM-390A	38	KK34090	TORSION SPRING 4090
LM-390A	39	LL62001	SHAFT HOLDER 80F-0403
LM-390A	40	LM11456	SCISSORS
LM-390A	41	LM11573	PLATEN GEAR D
LM-390A	42	LM11574	PLATEN GEAR E
LM-390A	43	LM11575	PLATEN GEAR F
LM-390A	44	LM12005	GEAR G
LM-390A	45	LM12021	CASSETTE HOLDER LINK
LM-390A	46	LM12028	TUBE GUIDE

Model	Part NO	Part Code	Description
LM-390A	47	LM12029	HALF CUTTER ADJUSTMENT LEVER
LM-390A	48	LM12031	SCISSORS B
LM-390A	49	LM12010	M-ROLLER LINK
LM-390A	50	LM12529	C GAUGE
LM-390A	51	LM12012	F GAUGE
LM-390A	52	LM12542	HALF CUTTER SPRING HOLDER A
LM-390A	53	LM12027	HALF CUTTER BASE
LM-390A	54	LM12546	HALF CUTTER ADJUSTMENT COLLAR
LM-390A	55	LM12548	SCISSORS LINK A
LM-390A	56	LM12550	FB HOLD COLLAR
LM-390A	57	LM12551	FB HOLD SPACER
LM-390A	58	LM12555	SCISSORS SPACER A
LM-390A	59	LM12569	TUBE GUIDE
LM-390A	60	LM12570	SCISSORS LINK B
LM-390A	61	LM12084	PLATEN SIDE GUIDE
LM-390A	62	LM12594	H/L LOCK COLLAR
LM-390A	63	LM12606	SCISSORS STOPPER
LM-390A	64	LM12607	SCISSORS GUIDE
LM-390A	65	LM12608	STOPPER RUBBER
LM-390A	66	LM12610	SCISSORS SPACER C2
LM-390A	67	LM12286	SEMITUBULAR RIVET
LM-390A	68	LM12696	LEVER LABEL (A11)
LM-390A	69	LM12618	RIBBON GEAR A
LM-390A	70	LM12619	RIBBON B
LM-390A	71	LM12620	TORQUE LIMITTER GEAR
LM-390A	73	LM12624	HALF CUTTER SPRING HOLDER B
LM-390A	74	LM12626	SCISSORS SHAFT
LM-390A	75	LM12628	RIBBON SENCE PLATE A
LM-390A	76	LM11541	ACTUATOR
LM-390A	77	LM12636	SCISSORS SPACER D
LM-390A	78	LM12640	CASSETE HOLDER GUIDE
LM-390A	79	LM12641	CASSETE HOLD COLLAR
LM-390A	80	LM12644	CASSETE HOLDER SPACER
LM-390A	81	LM12646	TUBE LABEL
LM-390A	82	LM12651	STEP PIN 1.6
LM-390A	83	LM10859	TORQUE LIMITTER 70
LM-390A	84	LM10860	TORQUE LIMTTER 140
LM-390A	85	LM12663	M ROLLER
LM-390A	86	IL12362	NYLON TIE
LM-390A	87	LM10829	ACTUATOR B
LM-390A	88	LM11472	SHAFT HOLDER SSF-49ZZ
LM-390A	90	YZ30001	CUSHION SJ-5012 BLACK
LM-390A	91	ZX30008	ADAPTER CORD
LM-390A	92	LM12728	LEVER ADJUSTMENT LABEL
LM-390A	93	LM13118	PLATE
LM-390A	94	YU07915	DC JACK HEC3800

Model	Part NO	Part Code	Description
LM-390A	100	LM12994	GEAR M
LM-390A	101	LM12996	PLATEN PLATE
LM-390A	102	LM12998	TUBE GUIDE PLATE
LM-390A	103	LM12999	HEAD U/D LEVER
LM-390A	104	LM13000	HEAD H/L PLATE
LM-390A	105	LM13001	HEAD H/L COLLAR
LM-390A	106	LM13002	HEAD H/L SPACER
LM-390A	107	LM13003	LOCK PIN
LM-390A	108	LM13004	HEAD PRESSURE HOOK
LM-390A	109	LM13005	LOCK PIN HOLDER
LM-390A	110	LM13006	HEAD CAM GEAR
LM-390A	111	LM13007	HEAD CAM
LM-390A	112	LM13008	LEVER SHAFT
LM-390A	113	LM13009	LEVER SHAFT PLATE
LM-390A	114	LM13010	SCISSORS BASE
LM-390A	115	LM13013	CUTTER LINK
LM-390A	116	LM13014	CUTTER GEAR
LM-390A	117	LM13017	HALF CUTTING MOTOR BRACKET
LM-390A	118	LM13337	UPPER CASE (A11)
LM-390A	119	LM13021	LOWER CASE (LM-390A/PC)
LM-390A	120	LM13022	CUTTER BUTTON
LM-390A	121	LM13023	CASSETTE HOLDER A
LM-390A	122	LM13025	CASSETTE COVER LOCK
LM-390A	123	LM13339	LCD WINDOW (A11)
LM-390A	124	LM13027	USB MEMORY COVER
LM-390A	125	LM13341	KB RUBBER (A11)
LM-390A	126	LM13029	R GAUGE
LM-390A	127	LM13038	NAME LABEL (LM-390A)
LM-390A	130	LM13336	RATING LABEL (A11)
LM-390A	131	LM13096	AC ADAPTER
LM-390A	132	LM13345	RELEASE LEVER LABEL (A11)
LM-390A	133	LM13104	CUTTER CAM
LM-390A	134	LM13110	CUTTER RINK SHAFT
LM-390A	135	LM13180	USB CAUTION LABEL (390T/W)
LM-390A	136	LM13347	CUTTER CAUTION LABEL (A11)
LM-390A	137	LM13141	TW COVER
LM-390A	138	LM13024	CASSETTE COVER
LM-390A	139	KK29062	SPRING 9062
LM-390A	140	LM13117	CAM COLLER N
LM-390A	144	LM13348	TUBE SET POSITION LABEL UPPER
LM-390A	145	LM13349	TUBE SET POSITION LABEL LOWER
LM-390A	146	LM13183	ER15967 USB FLASH DRIVE
LM-390A	150	LM70110	M-ROLLER LEVER UNIT
LM-390A	151	LM70222	M-ROLLER ARM UNIT
LM-390A	153	LM70336	BASE PLATE UNIT
LM-390A	154	LM70337	MOTOR PLATE UNIT

Model	Part NO	Part Code	Description
LM-390A	155	LM70338	HEAD PUSHER UNIT
LM-390A	156	LM70339	SIDE PLATE UNIT
LM-390A	158	LM70478	PLATEN ROLLER UNIT
LM-390A	159	LM70482	HALF CUTTER MOTER
LM-390A	160	LM70388	LCD (LM-390A) UNIT
LM-390A	161	LM70389	MOTOR UNIT
LM-390A	162	LM70390	SENSOR UNIT
LM-390A	163	LM70392	HALF CUTTER SENSOR UNIT
LM-390A	164	LM70394	MAIN PWB 390A
LM-390A	165	LM70406	KB PWB UNIT
LM-390A	166	LM70432	KB PWB WIRE A UNIT
LM-390A	167	LM70433	KB PWB WIRE B UNIT
LM-390A	168	LM70469	HALF CUTTER ASSY
LM-390A	200	LM81047	FLL-CUT BASE
LM-390A	203	LM81069	THERMAL HEAD ASSY