

RB217(CE)


EXPLODED
VIEW AND SPARE
PARTS LIST

EINZELTEILDAR-
STELLUNG UND
ERSATZEILLISTE

SCHEMA ECLATE ET
LISTE DES PIÉCES
DE RECHANGE

ESPLOSO DEI
COMPONENTI DE
ELENCO DELLE
PARTI DI RICAMBIO

DESPIECE DE LA
MAQUINA Y LISTA
DE RECAMBIOS

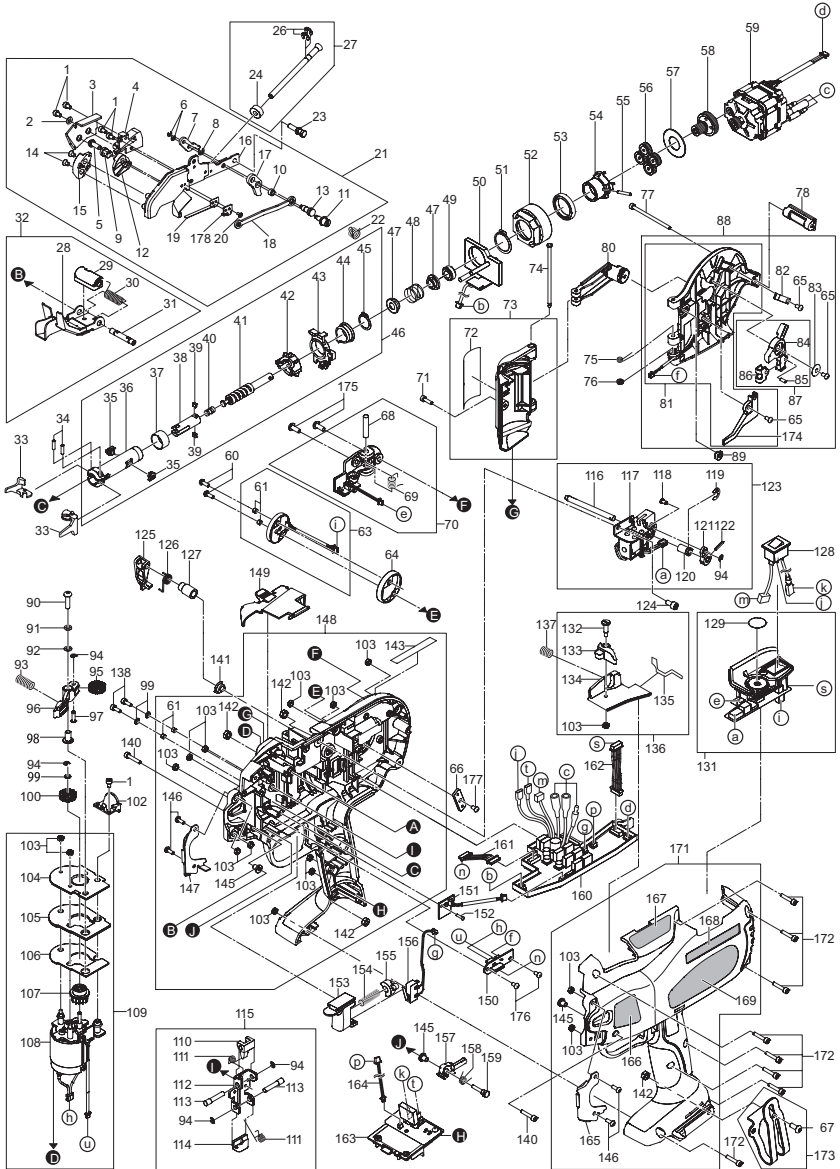

Tool Model	Part NO	Part Code	Description
RB217	1	BB40481	BOLT 3X5
RB217	2	EE31122	WASHER 3X7
RB217	3	RB12229	ARM B
RB217	4	RB12230	WARE GUIDE B
RB217	5	FF41724	PIN 1724
RB217	6	JJ10109	E-RING 2
RB217	7	RB12090	CUTTER LEVER B(397)
RB217	8	JJ10514	E-RING 3 CF
RB217	9	RB10379	FIXED CUTTER
RB217	10	FF51686	PIN 1686
RB217	11	RB12710	SHAFT
RB217	12	RB10378	CUTTER
RB217	13	RB10392	PIN
RB217	14	AA22005	SCREW M3X5
RB217	15	RB10525	WIRE GUIDE A
RB217	16	RB70517	ARM A UNIT
RB217	17	RB12228	CUTTER LEVER A
RB217	18	RB12231	CONNECTING ROD
RB217	19	RB10540	LEAF SPRING
RB217	20	AA25113	PAN-HEAD SCREW 2X4
RB217	21	RB70516	CURL GUIDE ASSY (RB217)
RB217	22	KK33370	SPRING 3370
RB217	23	RB12003	SCREW
RB217	24	RB12007	PIPE SPONGE
RB217	26	JJ10509	E-RING 4
RB217	27	RB81207	PIPE ASSY (RB217)
RB217	28	RB70511	CURL GUIDE UNIT (217)
RB217	29	RB12010	CURL GUIDE COVER
RB217	30	KK33365	TORSION SPRING
RB217	31	RB12110	STOPPER SHAFT
RB217	32	RB70510	CURL GUIDE ASSY (RB217)
RB217	33	RB11102	HOOK
RB217	34	RB81113	WS PIN 2.5X10
RB217	35	RB12014	KEY B
RB217	36	RB12017	SLEEVE A
RB217	37	RB12016	SLEEVE GUIDE
RB217	38	RB70675	TIP AXIS B
RB217	39	RB10115	KEY B
RB217	40	KK23730	COMP. SPRING 3730
RB217	41	RB12018	TIP AXIS A
RB217	42	RB12015	SLEEVE B
RB217	43	RB70412	CUTTER RING UNIT
RB217	44	RB12091	CUTTER RING GUIDE
RB217	45	JJ21011	C-RING 14
RB217	46	RB81274	TIP AXIS ASSY
RB217	47	RB12020	SPRING COLLAR
RB217	48	KK29026	COMP. SPRING 9026
RB217	49	RB12019	BUMPER
RB217	50	RB81177	TIP AXIS GUIDE ASSY
RB217	51	JJ21603	C-RING 20
RB217	52	RB10338	INTERNAL GEAR

Tool Model	Part NO	Part Code	Description
RB217	53	LL11181	WHEEL 6704
RB217	54	RB70408	PLANETCAGE UNIT
RB217	55	FF31589	PIN 1589
RB217	56	RB10341	PLANET GEAR
RB217	57	RB10484	GEAR PRESS WHEEL
RB217	58	RB70418	SUN GEAR UNIT
RB217	59	RB70413	TWISTING MOTOR RS-550VF
RB217	60	AA21419	SCREW 3X8
RB217	61	FF51817	HOLLOW PIN 1817
RB217	63	RB81246	REEL GUIDE ASSY
RB217	64	RB12284	REEL GUIDE
RB217	65	AA05555	SCREW 3X6 CF
RB217	66	RB11687	NUT PLATE
RB217	67	BB41706	BOLT 4X10
RB217	68	FF31563	PIN 1563
RB217	69	KK34089	SPRING 4089
RB217	70	RB81181	RATCHET COVER ASSY
RB217	71	BB40425	BOLT 3X10
RB217	72	RB12100	WARNING LABLE A
RB217	73	RB70401	MOTOR COVER ASSY(397CE)
RB217	74	FF41821	STEP PIN 1821
RB217	75	KK34067	TORSION SPRING 4067
RB217	76	EE39609	RUBBER WASHER 1.8X6X2
RB217	77	BB40714	BOLT 3X50
RB217	78	RB12031	JOINT
RB217	80	RB81178	REEL HOLDER ASSY
RB217	81	RB81179	REEL MAGAZINE
RB217	82	RB12038	REEL STOPPER SPRING
RB217	83	EE39907	WASHER 3.1X12X0.8
RB217	84	RB12035	REEL STOPPER
RB217	85	FF21240	PIN 2.5X6
RB217	86	RB12036	STOPPER PLATE
RB217	87	RB70427	REEL STOPPER
RB217	88	RB81180	REEL MAGAZINE ASSY
RB217	89	RB12099	PLATE B
RB217	90	BB41707	BOLT 4X16
RB217	91	EE11103	SPRING WASHER 2-4
RB217	92	EE39825	WASHER 4.5X7.4X0.8
RB217	93	KK24175	COMP. SPRING 4175
RB217	94	JJ10113	E-RING 2.5
RB217	95	RB10359	FEEDING GEAR B2
RB217	96	RB10362	RELEASE LEVER
RB217	97	FF41809	STEP PIN 1809
RB217	98	FF51628	HOLLOW PIN 1628
RB217	99	EE32104	WASHER 2-3
RB217	100	RB10357	FEEDING GEAR B1
RB217	102	RB10364	WIRE GUIDE C
RB217	103	CC41104	HEX.NUT 1-3 FOR HD-12/17
RB217	104	RB70434	PARTITION PLATE
RB217	105	RB12045	PARTITION SPONGE
RB217	106	RB12421	SPONGE SUPPORT

Tool Model	Part NO	Part Code	Description
RB217	107	RB70509	FEEDING GEAR A ASSY
RB217	108	RB81266	FEEDING MOTOR ASSY
RB217	109	RB81267	FEEDING ASSY
RB217	110	RB10368	JAW A
RB217	111	KK33249	TORSION SPRING 3249
RB217	112	RB10370	JAW BASE
RB217	113	FF41822	STEP PIN 1822
RB217	114	RB10369	JAW B
RB217	115	RB70495	JAW BASE ASSY
RB217	116	RB12238	ROTARY PIN
RB217	117	RB81185	SOLENOID ASSY
RB217	118	FF41855	PIN 1855
RB217	119	JJ10106	E-RING 6
RB217	120	RB12030	PALTE C
RB217	121	RB12029	ROTARY PLATE
RB217	122	FF21620	PIN 2X12
RB217	123	RB70531	BRAKE ASSY
RB217	124	BB40712	BOLT 4X8
RB217	125	RB12025	REEL PRESS
RB217	126	KK33373	SPRING 3373
RB217	127	FF52114	HOLLOW PIN 2114
RB217	128	RB70457	MAIN SWITCH UNIT(RB397)
RB217	129	RB12234	DIAL LABEL
RB217	131	RB81209	SWITCH BASE ASSY (RB217)
RB217	132	RB12054	STEP PIN
RB217	133	RB12053	RELEASE STOPPER
RB217	134	RB12055	STOPPER BASE
RB217	135	RB12056	SPONGE F
RB217	136	RB81139	STOPPER BASE ASSY
RB217	137	KK29133	COMPRESSION SPRING 3561
RB217	138	BB40710	BOLT 3X8
RB217	140	BB40709	BOLT 3X16
RB217	141	RB12236	PLATE A
RB217	142	CC42512	HEX NUT 1A M4
RB217	143	RB12098	WARNING LABEL
RB217	145	FF52111	PIN 2111
RB217	146	BB41503	BOLT 3X8
RB217	147	RB12226	COVER (RB217)
RB217	148	RB70514	FRAME L ASSY (RB217)
RB217	149	RB11987	WINDOW
RB217	150	RB81195	RELAY BOARD UNIT
RB217	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB217	152	AA31724	SCREW 2X8
RB217	153	RB12080	TRIGGER (397)
RB217	154	KK23656	COMPRESSION SPRING 3656
RB217	155	RB12101	TRIGGER LOCK LEVER(397)
RB217	156	RB70453	TRIGGER AWITCH UNIT(RB397)
RB217	157	RB70473	SWITCH LEVER UNIT
RB217	158	KK34083	SPRING 4083
RB217	159	RB11686	SWITCH LEVER PIN
RB217	160	RB70522	MAIN CIRCUIT BOARD UNIT (RB217)

Tool Model	Part NO	Part Code	Description
RB217	161	RB70465	REPLAY BOARD HARNESS UNIT(RB39
RB217	162	RB70454	INTERFACE HARNESS UNIT(RB397
RB217	163	RB81188	ELECTRODE UNIT
RB217	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB217	165	RB12224	COVER R (RB217)
RB217	166	RB11983	LABEL CURL GUIDE
RB217	167	RB11985	USAGE LABEL
RB217	168	RB12237	LABEL, MAIN SWITCH
RB217	169	RB12225	NAME LABEL RB217CE
RB217	171	RB70513	FRAME R ASSY (RB217)
RB217	172	BB40810	BOLT 3X16
RB217	173	RB81184	BELT HOOK ASSY
RB217	174	RB12039	LED COVER
RB217	175	BB41708	BOLT 4X10
RB217	176	AA31722	SCREW 3X8
RB217	177	AA31721	SCREW 3X6
RB217	178	RB11141	REAF SPRING GUIDE