


# RB397(USA)

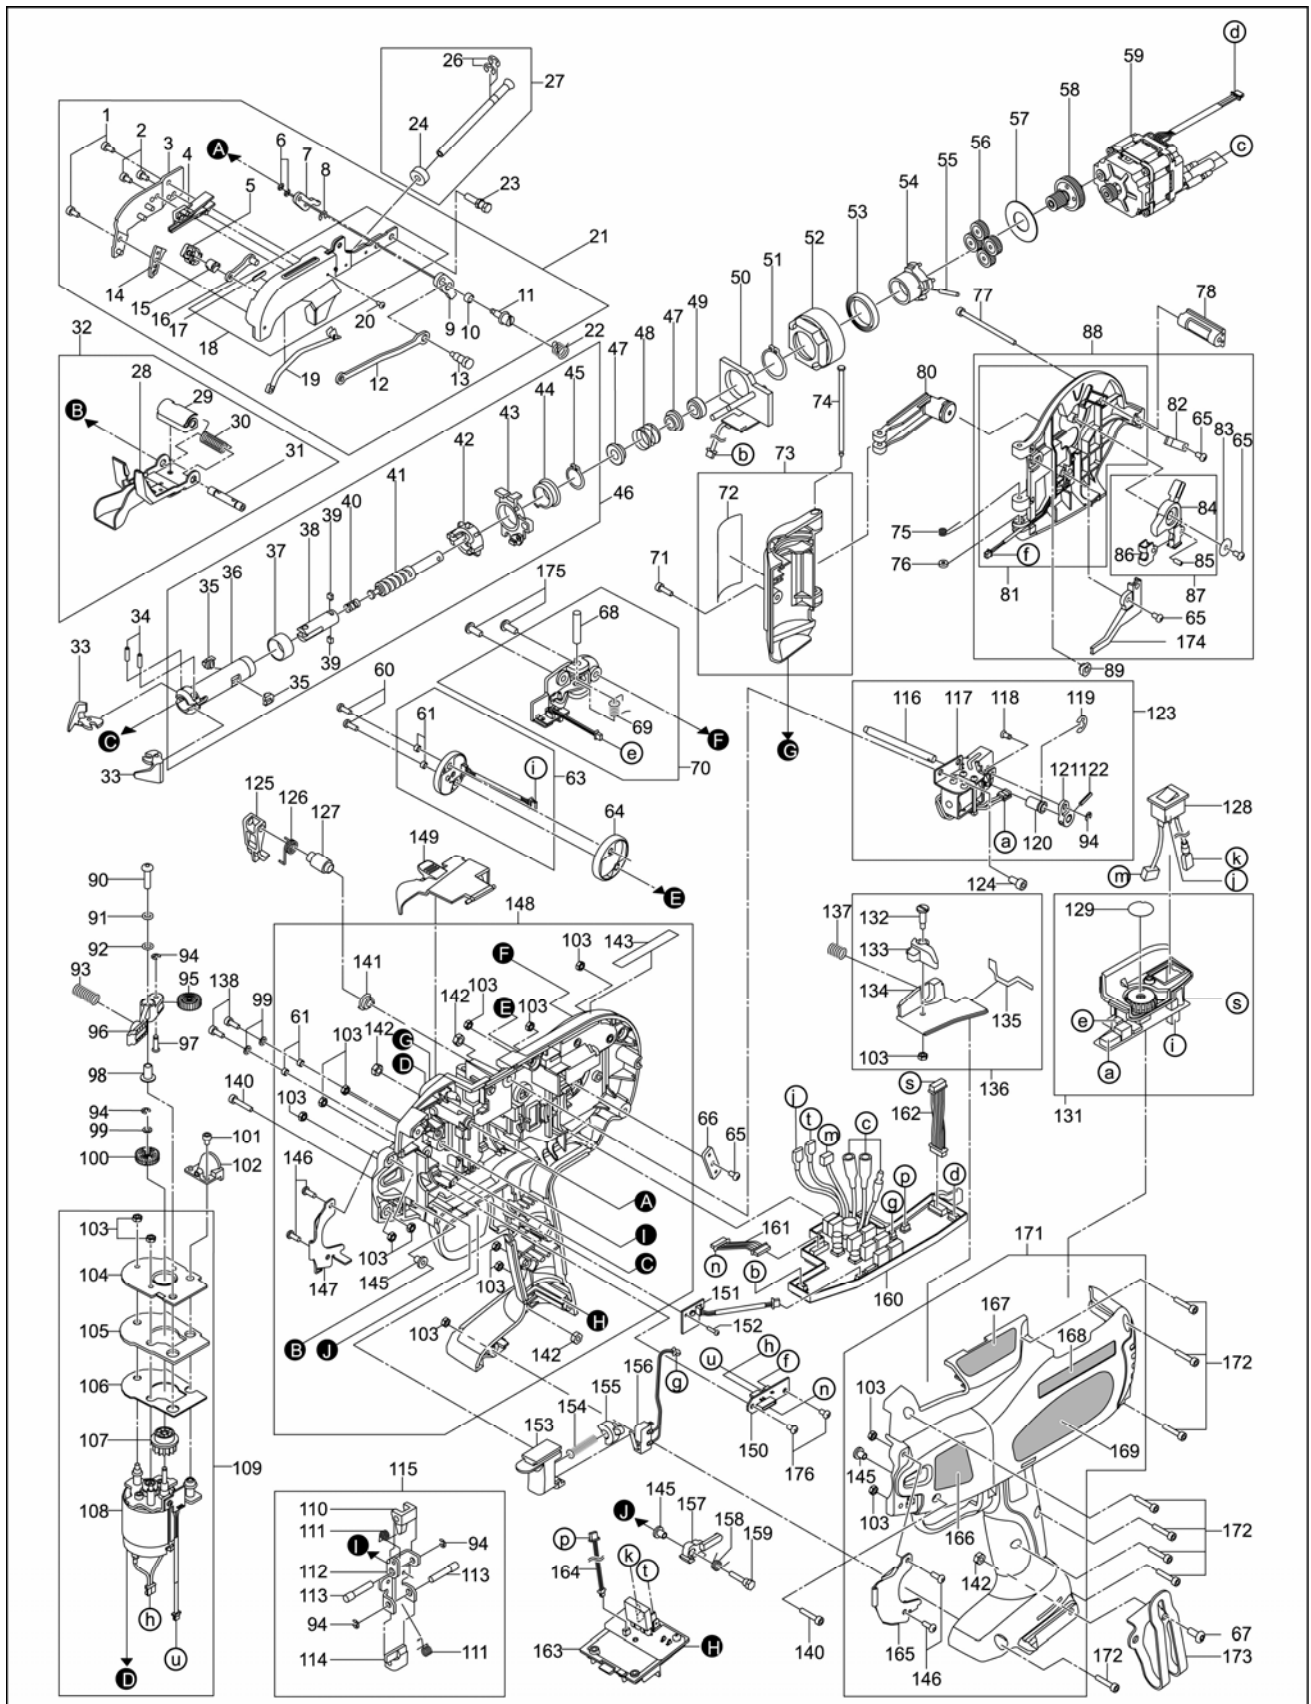

Tool Model	Part NO	Part Code	Description
RB397	1	BB40112	BOLT 3X6
RB397	2	BB40711	BOLT 3X5
RB397	3	RB70404	ARM B UNIT(397)
RB397	4	RB11999	WIRE GUIDE B(397)
RB397	5	RB12000	CUTTER
RB397	6	JJ10109	E-RING 2
RB397	7	RB12090	CUTTER LEVER B(397)
RB397	8	JJ10514	E-RING 3 CF
RB397	9	RB12005	CUTTER LEVER A(397)
RB397	10	FF51686	PIN 1686
RB397	11	RB12710	SHAFT
RB397	12	RB12004	CONNECTING ROD(397)
RB397	13	RB10392	PIN
RB397	14	RB11998	WIRE GUIDE A(397)
RB397	15	RB12121	FIXED CUTTER (N)
RB397	16	RB70493	CUTTER PLATE UNIT
RB397	17	RB12085	PLATE
RB397	18	RB81175	ARM A UNIT
RB397	19	RB11997	LEAF SPRING(397)
RB397	20	AA25113	PAN-HEAD SCREW 2X4
RB397	21	RB70402	ARM ASSY(397)
RB397	22	KK33370	SPRING 3370
RB397	23	RB12003	SCREW
RB397	24	RB12007	PIPE SPONGE
RB397	26	JJ10509	E-RING 4
RB397	27	RB81136	PIPE ASSY
RB397	28	RB70406	CURL GUIDE UNIT
RB397	29	RB12010	CURL GUIDE COVER
RB397	30	KK33365	TORSION SPRING
RB397	31	RB12110	STOPPER SHAFT
RB397	32	RB70405	CURL GUIDE ASSY(397)
RB397	33	RB11816	HOOK
RB397	34	RB81113	WS PIN 2.5X10
RB397	35	RB12014	KEY B
RB397	36	RB12017	SLEEVE A
RB397	37	RB12016	SLEEVE GUIDE
RB397	38	RB70675	TIP AXIS B
RB397	39	RB10115	KEY B
RB397	40	KK23730	COMP. SPRING 3730
RB397	41	RB12018	TIP AXIS A
RB397	42	RB12015	SLEEVE B
RB397	43	RB70412	CUTTER RING UNIT
RB397	44	RB12091	CUTTER RING GUIDE
RB397	45	JJ21011	C-RING 14
RB397	46	RB81274	TIP AXIS ASSY
RB397	47	RB12020	SPRING COLLAR
RB397	48	KK29026	COMP. SPRING 9026
RB397	49	RB12019	BUMPER
RB397	50	RB81177	TIP AXIS GUIDE ASSY
RB397	51	JJ21603	C-RING 20
RB397	52	RB10338	INTERNAL GEAR

Tool Model	Part NO	Part Code	Description
RB397	53	LL11181	WHEEL 6704
RB397	54	RB70408	PLANETCAGE UNIT
RB397	55	FF31589	PIN 1589
RB397	56	RB10341	PLANET GEAR
RB397	57	RB10484	GEAR PRESS WHEEL
RB397	58	RB70418	SUN GEAR UNIT
RB397	59	RB70413	TWISTING MOTOR RS-550VF
RB397	60	AA21419	SCREW 3X8
RB397	61	FF51652	PIN 1652
RB397	63	RB81246	REEL GUIDE ASSY
RB397	64	RB12284	REEL GUIDE
RB397	65	AA05555	SCREW 3X6 CF
RB397	66	RB11687	NUT PLATE
RB397	67	BB41706	BOLT 4X10
RB397	68	FF31563	PIN 1563
RB397	69	KK34089	SPRING 4089
RB397	70	RB81181	RATCHET COVER ASSY
RB397	71	BB40425	BOLT 3X10
RB397	72	RB10421	LABEL, FCC (USA)
RB397	73	RB70476	MOTOR COVER ASSY(397USA)
RB397	74	FF41821	STEP PIN 1821
RB397	75	KK34067	TORSION SPRING 4067
RB397	76	EE39609	RUBBER WASHER 1.8X6X2
RB397	77	BB40714	BOLT 3X50
RB397	78	RB12031	JOINT
RB397	80	RB81178	REEL HOLDER ASSY
RB397	81	RB81179	REEL MAGAZINE
RB397	82	RB12038	REEL STOPPER SPRING
RB397	83	EE39907	WASHER 3.1X12X0.8
RB397	84	RB12035	REEL STOPPER
RB397	85	FF21240	PIN 2.5X6
RB397	86	RB12036	STOPPER PLATE
RB397	87	RB70427	REEL STOPPER
RB397	88	RB81180	REEL MAGAZINE ASSY
RB397	89	RB12099	PLATE B
RB397	90	BB41707	BOLT 4X16
RB397	91	AA31722	SPRING WASHER 2-4
RB397	92	EE39825	WASHER 4.5X7.4X0.8
RB397	93	KK24175	COMP. SPRING 4175
RB397	94	JJ10113	E-RING 2.5
RB397	95	RB10359	FEEDING GEAR B2
RB397	96	RB10362	RELEASE LEVER
RB397	97	FF41809	STEP PIN 1809
RB397	98	FF51628	HOLLOW PIN 1628
RB397	99	EE32104	WASHER 2-3
RB397	100	RB10357	FEEDING GEAR B1
RB397	101	BB40481	BOLT 3X5
RB397	102	RB10364	WIRE GUIDE C
RB397	103	CC41104	HEX.NUT 1-3 FOR HD-12/17
RB397	104	RB70434	PARTITION PLATE
RB397	105	RB12045	PARTITION SPONGE

Tool Model	Part NO	Part Code	Description
RB397	106	RB12421	SPONGE SUPPORT
RB397	107	RB70509	FEEDING GEAR A ASSY
RB397	108	RB81266	FEEDING MOTOR ASSY
RB397	109	RB81267	FEEDING ASSY
RB397	110	RB10368	JAW A
RB397	111	KK33249	TORSION SPRING 3249
RB397	112	RB10370	JAW BASE
RB397	113	FF41822	STEP PIN 1822
RB397	114	RB10369	JAW B
RB397	115	RB70495	JAW BASE ASSY
RB397	116	RB12238	ROTARY PIN
RB397	117	RB81185	SOLENOID ASSY
RB397	118	FF41855	PIN 1855
RB397	119	JJ10106	E-RING 6
RB397	120	RB12030	PALTE C
RB397	121	RB12029	ROTARY PLATE
RB397	122	FF21620	PIN 2X12
RB397	123	RB70531	BRAKE ASSY
RB397	124	BB40712	BOLT 4X8
RB397	125	RB12025	REEL PRESS
RB397	126	KK33373	SPRING 3373
RB397	127	FF52114	PIN 2114
RB397	128	RB70457	MAIN SWITCH UNIT(RB397)
RB397	129	RB12078	LABEL, TORQUE DIAL
RB397	131	RB81186	SWITCH BASE ASSY
RB397	132	RB12054	STEP PIN
RB397	133	RB12053	RELEASE STOPPER
RB397	134	RB12055	STOPPER BASE
RB397	135	RB12056	SPONGE F
RB397	136	RB81139	STOPPER BASE ASSY
RB397	137	KK29133	COMPRESSION SPRING 3561
RB397	138	BB40710	BOLT 3X8
RB397	140	BB40709	BOLT 3X16
RB397	141	RB12236	PLATE A
RB397	142	CC42512	HEX NUT 1A M4
RB397	143	RB12098	WARNING LABEL
RB397	145	FF52111	PIN 2111
RB397	146	BB41503	BOLT 3X8
RB397	147	RB11979	COVER L(397)
RB397	148	RB81134	FRAME L ASSY(397)
RB397	149	RB11987	WINDOW
RB397	150	RB81195	RELAY BOARD UNIT
RB397	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB397	152	AA31724	SCREW 2X8
RB397	153	RB12080	TRIGGER (397)
RB397	154	KK23656	COMPRESSION SPRING 3656
RB397	155	RB12101	TRIGGER LOCK LEVER(397)
RB397	156	RB70453	TRIGGER AWITCH UNIT(RB397)
RB397	157	RB70473	SWITCH LEVER UNIT
RB397	158	KK34083	SPRING 4083
RB397	159	RB11686	SWITCH LEVER PIN

<b>Tool Model</b>	<b>Part NO</b>	<b>Part Code</b>	<b>Description</b>
RB397	160	RB70446	MAIN CIRCUIT BOARD UNIT(RB397)
RB397	161	RB70465	REPLAY BOARD HARNESS UNIT(RB397)
RB397	162	RB70454	INTERFACE HARNESS UNIT(RB397)
RB397	163	RB81188	ELECTRODE UNIT
RB397	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB397	165	RB11981	COVER R (397)
RB397	166	RB11983	LABEL CURL GUIDE
RB397	167	RB11985	USAGE LABEL
RB397	168	RB11982	LABEL, MAIN SWITCH
RB397	169	RB12127	NAME LABEL (397USA)
RB397	171	RB70475	FRAME R ASSY(397USA)
RB397	172	BB40810	BOLT 3X16
RB397	173	RB81184	BELT HOOK ASSY
RB397	174	RB12039	LED COVER
RB397	175	BB41708	BOLT 4X10
RB397	176	AA31722	SCREW 3X8