

Tool Model	Part NO	Part Code	Description
RB517	1	BB40481	BOLT 3X5
RB517	2	EE31122	WASHER 3X7
RB517	3	RB12263	ARM B
RB517	4	AA22005	SCREW M3X5
RB517	5	RB11811	WIRE GUIDE A
RB517	6	RB11798	WIRE GUIDE B
RB517	7	RB12090	CUTTER LEVER B (RB397)
RB517	8	JJ10109	E-RING 2
RB517	9	RB11815	FIXED CUTTER
RB517	10	FF44120	PIN 4120
RB517	11	RB11818	CUTTER
RB517	12	RB81222	ARM A UNIT (RB517)
RB517	13	RB11800	LEAF SPRING
RB517	14	AA25113	PAN-HEAD SCREW 2X4
RB517	15	JJ10514	E-RING 3 CF
RB517	16	RB12228	CUTTER LEVER A
RB517	17	RB12265	CONNECTING ROD
RB517	18	RB10392	PIN
RB517	19	AA71408	SCREW 3 X 3
RB517	20	FF51667	PIN 1667
RB517	21	RB11814	WIRE GUIDE SCREW
RB517	22	KK33370	SPRING 3370
RB517	23	RB12003	SCREW
RB517	24	RB12007	PIPE SPONGE
RB517	25	FF51686	PIN 1686
RB517	26	JJ10509	E-RING 4
RB517	27	RB81219	PIPE ASSY (RB517)
RB517	28	RB81224	CURL GUIDE UNIT (RB517)
RB517	29	RB12010	CURL GUIDE COVER
RB517	30	KK33365	TORSION SPRING
RB517	31	RB11708	STOPPER SHAFT
RB517	32	RB81217	CURL GUIDE ASSY (RB517)
RB517	33	RB11816	HOOK
RB517	34	RB81113	WS PIN 2.5X10
RB517	35	RB12014	KEY B
RB517	36	RB12280	SLEEVE A
RB517	37	RB12279	SLEEVE GUIDE
RB517	38	RB81242	TIP AXIS B
RB517	39	RB10115	KEY B
RB517	40	KK23730	COMP. SPRING 3730
RB517	41	RB12281	TIP AXIS A
RB517	42	RB12015	SLEEVE B
RB517	43	RB70412	CUTTER RING UNIT
RB517	44	RB12091	CUTTER RING GUIDE
RB517	45	JJ21011	C-RING 14
RB517	46	RB81247	TIP AXIS ASSY
RB517	47	RB12020	SPRING COLLAR
RB517	48	KK29026	COMP. SPRING 9026
RB517	49	RB12019	BUMPER
RB517	50	RB81177	TIP AXIS GUIDE ASSY
RB517	51	JJ21603	C-RING 20

RB517	52	RB10338	INTERNAL GEAR
RB517	53	LL11181	WHEEL 6704
RB517	54	RB70408	PLANETCAGE UNIT
RB517	55	FF31589	PIN 1589
RB517	56	RB10341	PLANET GEAR
RB517	57	RB10484	GEAR PRESS WHEEL
RB517	58	RB70418	SUN GEAR UNIT
RB517	59	RB70558	TWISTING MOTOR (RB517)
RB517	60	AA21419	SCREW 3X8
RB517	61	FF51817	HOLLOW PIN 1817
RB517	62	RB81248	WIRE GUIDE A ASSY
RB517	63	RB81246	REEL GUIDE ASSY
RB517	64	RB12284	REEL GUIDE
RB517	65	AA05555	SCREW 3X6 CF
RB517	66	RB11687	NUT PLATE
RB517	67	BB41706	BOLT 4X10
RB517	68	FF31563	PIN 1563
RB517	69	KK34089	SPRING 4089
RB517	70	RB81181	RATCHET COVER ASSY
RB517	71	BB40425	BOLT 3X10
RB517	72	RB10421	LABEL, FCC (USA)
RB517	73	RB70476	MOTOR COVER ASSY (RB397USA)
RB517	74	FF41821	STEP PIN 1821
RB517	75	KK34067	TORSION SPRING 4067
RB517	76	EE39609	RUBBER WASHER 1.8X6X2
RB517	77	BB40714	BOLT 3X50
RB517	78	RB12031	JOINT
RB517	79	RB12710	SHAFT
RB517	80	RB81178	REEL HOLDER ASSY
RB517	81	RB81179	REEL MAGAZINE
RB517	82	RB12038	REEL STOPPER SPRING
RB517	83	EE39907	WASHER 3.1X12X0.8
RB517	84	RB12035	REEL STOPPER
RB517	85	FF21240	PIN 2.5X6
RB517	86	RB12036	STOPPER PLATE
RB517	87	RB70427	REEL STOPPER
RB517	88	RB81180	REEL MAGAZINE ASSY
RB517	89	RB12099	PLATE B
RB517	90	BB41707	BOLT 4X16
RB517	91	EE11103	SPRING WASHER 2-4
RB517	92	EE39825	WASHER 4.5X7.4X0.8
RB517	93	KK24175	COMP. SPRING 4175
RB517	94	JJ10113	E-RING 2.5
RB517	95	RB10359	FEEDING GEAR B2
RB517	96	RB10362	RELEASE LEVER
RB517	97	FF41809	STEP PIN 1809
RB517	98	FF51628	HOLLOW PIN 1628
RB517	99	EE32104	WASHER 2-3
RB517	100	RB10357	FEEDING GEAR B1
RB517	102	RB10364	WIRE GUIDE C
RB517	103	CC41104	HEX.NUT 1-3 FOR HD-12/17
RB517	104	RB70434	PARTITION PLATE

RB517	105	RB12045	PARTITION SPONGE
RB517	106	RB12421	SPONGE SUPPORT
RB517	107	RB70509	FEEDING GEAR A ASSY
RB517	108	RB81266	FEEDING MOTOR ASSY
RB517	109	RB81267	FEEDING ASSY
RB517	110	RB10368	JAW A
RB517	111	KK33249	TORSION SPRING 3249
RB517	112	RB10370	JAW BASE
RB517	113	FF41822	STEP PIN 1822
RB517	114	RB10369	JAW B
RB517	115	RB70495	JAW BASE ASSY
RB517	116	RB12238	ROTARY PIN
RB517	117	RB81185	SOLENOID ASSY
RB517	118	FF41855	PIN 1855
RB517	119	JJ10106	E-RING 6
RB517	120	RB12030	PALTE C
RB517	121	RB12029	ROTARY PLATE
RB517	122	FF21620	PIN 2X12
RB517	123	RB70531	BRAKE ASSY
RB517	124	BB40712	BOLT 4X8
RB517	125	RB12025	REEL PRESS
RB517	126	KK33373	SPRING 3373
RB517	127	FF52114	HOLLOW PIN 2114
RB517	128	RB70457	MAIN SWITCH UNIT (RB397)
RB517	129	RB12267	LABEL, TORQUE DIAL (RB517)
RB517	131	RB81232	SWITCH BASE ASSY (RB517)
RB517	132	RB12054	STEP PIN
RB517	133	RB12053	RELEASE STOPPER
RB517	134	RB12055	STOPPER BASE
RB517	135	RB12056	SPONGE F
RB517	136	RB81139	STOPPER BASE ASSY
RB517	137	KK29133	COMPRESSION SPRING 3561
RB517	138	BB40710	BOLT 3X8
RB517	140	BB40709	BOLT 3X16
RB517	141	RB12236	PLATE A
RB517	142	RB12119	HEX NUT M4
RB517	143	RB12098	WARNING LABEL
RB517	145	FF52111	PIN 2111
RB517	146	BB41503	BOLT 3X8
RB517	147	RB11979	COVER L (RB397)
RB517	148	RB81253	FRAME L ASSY
RB517	149	RB11987	WINDOW
RB517	150	RB81195	RELAY BOARD UNIT
RB517	151	RB81191	SENSOR CIRCUIT D BOARD UNIT
RB517	152	AA31724	SCREW 2X8
RB517	153	RB12080	TRIGGER (RB397)
RB517	154	KK23656	COMPRESSION SPRING 3656
RB517	155	RB12101	TRIGGER LOCK LEVER (RB397)
RB517	156	RB70453	TRIGGER SWITCH UNIT (RB397)
RB517	157	RB70473	SWITCH LEVER UNIT
RB517	158	KK34083	SPRING 4083
RB517	159	RB11686	SWITCH LEVER PIN

RB517	160	RB81225	MAIN CIRCUIT BOARD UNIT (RB517)
RB517	161	RB70465	REPLAY BOARD HARNESS UNIT(RB397)
RB517	162	RB70454	INTERFACE HARNESS UNIT (RB397)
RB517	163	RB81188	ELECTRODE UNIT
RB517	164	RB70464	BATTERY SIGNAL HARNESS UNIT
RB517	165	RB11981	COVER R (RB397)
RB517	166	RB11983	LABEL CURL GUIDE
RB517	167	RB11985	USAGE LABEL
RB517	168	RB11982	LABEL, MAIN SWITCH
RB517	169	RB12303	517 LABEL (RB517USA)
RB517	171	RB81226	FRAME R ASSY (RB517USA)
RB517	172	BB40810	BOLT 3X16
RB517	173	RB81184	BELT HOOK ASSY
RB517	174	RB12039	LED COVER
RB517	175	BB41708	BOLT 4X10
RB517	176	AA31722	SCREW 3X8